



TECHNICAL BULLETIN

Handset (Transmitter) Button Setting

GRD 2000™

TB-RDIOCGN0906-GRD 2000™

Issue Date: October 2006

Title: GRD 2000™ Handset (Transmitter) Button Setting


The TM305C Remote Handset (Transmitter) features 3 buttons.

The three buttons allow either additional Gliderol compatible model receivers to be configured or the use of a stand alone receiver where an alternate brand of remote control system is installed.



The larger button is generally configured to operate either a single door or the designated point of access where it has been configured to operate an additional door or gate.

The key setting is changed with the jumper jumper/shunt settings located on the main control board of the GRD control box

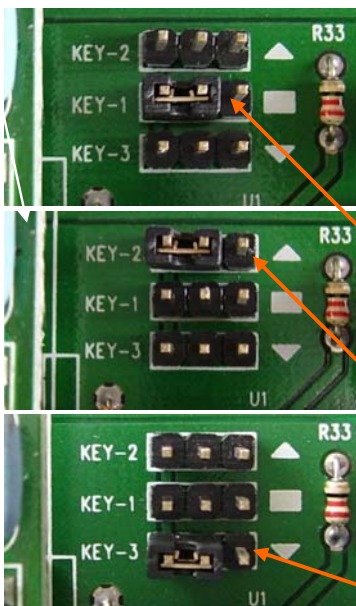

1. Carefully remove cover from control box by lifting tab at bottom
2. Locate the three jumpers/shunts on the main control board (Adjacent receiver board)
3. These are labelled KEY2, KEY1 & KEY3 and correspond to the buttons on the remote handset unit as shown
4. Set the jumper to the left pins adjacent the desired key label

- If button 1 is to be used, set the jumper to the left two pins of KEY1;
- If button 2 is to be used, set the jumper to the left two pins of KEY2;
- If button 3 is to be used, set the jumper to the left two pins of KEY3

