

Glidermatic GRD+

Manual Operation Guide

The following instructions demonstrate how to switch your Glidermatic GRD+ operator into manual operation mode and then back into automatic operation. This can be particularly useful in the event of a power outage or a problem arising with your operator, allowing you to remove a trapped vehicle from your garage.

How to put in Manual Operation Mode:



To put the door into manual operation, pull down firmly on the red ball hanging from your operator. This will pull the lever downward before returning to the upright position. Your door can now be manually operated.

How to put in Auto Operation Mode:



To put the door back into auto operation, start with the door in the halfway position (partially open). Pull down firmly on the red ball hanging from your operator. This will pull the lever downward before returning to the upright position. Your door can now be automatically operated. Please note, the door will return to the closed position on its first automatic cycle.

You can now put your door in Manual or Automatic operation mode!

Should you require further assistance in operating your door, please contact your local Gliderol office on 1300 799 177.