

Glidermatic GRD

Programming New or Additional Handsets


The following instructions demonstrate how to program a new or additional Gliderol handset to suit your existing Glidermatic GRD garage door operator. Please note, if you are replacing a lost or stolen handset we recommend erasing all existing handset data from your operator prior to programming your new handset. To erase all handsets from the memory, hold down the receiver button (shown in step 2) for 15 seconds. Any other handsets previously used will need to be reprogrammed. Each unit can be configured to accept up to ten separate handsets.

Step 1:



Carefully remove the Control Box cover by lifting the tab on the bottom of the unit.

Step 2:

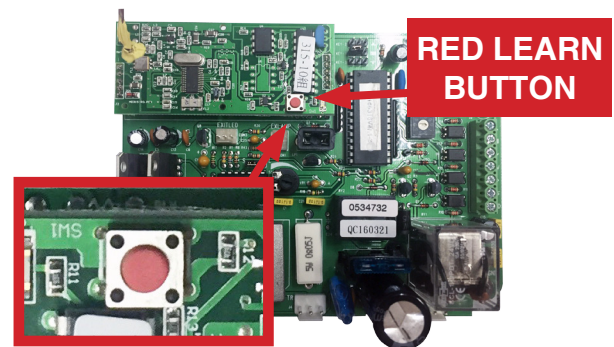

Press the red button once. A red light will illuminate to confirm the unit is in learn mode.

Step 3:



Press the large button on your handset once and then wait until the red light on the receiver board turns off.

Your handset programming is now complete!



Please note, this procedure will simply program your handset to operate your Gliderol Roller Door. To change your handset key settings (the specific button on the handset that operates your door), please refer to our 'Glidermatic GRD Handset Key Settings' factsheet.