


# Glidermatic GTS+ Handset Key Settings

The following instructions demonstrate how to program or change the key settings on your Gliderol handset, allowing you to select the specific button that operates your door. This procedure will assist in reprogramming your handset from three-button Open/Stop/Close operation to single-button operation. It will also assist in reprogramming your handset to operate multiple doors.


## Step 1:

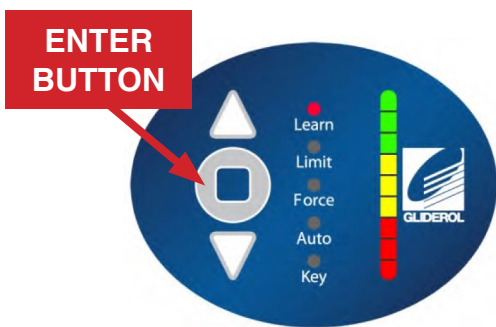

Press and hold the 'Enter' button (shown above) for 2 seconds to access the operator menu. The unit will beep twice to confirm this has been selected.

**Note:** Pressing the enter button for 5 seconds or more will erase all handset data from your operator - be careful not to press the enter key for longer than necessary.

## Step 2:

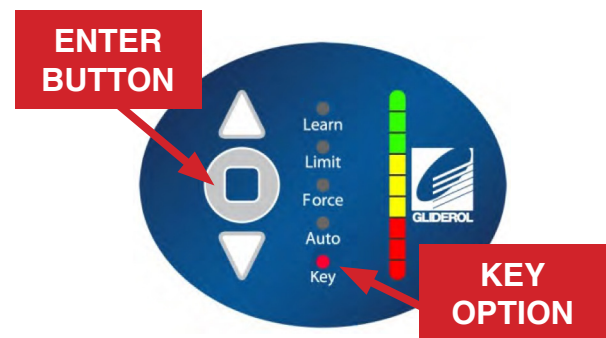

Use the arrow (Up & Down) buttons to select the 'Key' option and press 'Enter' to confirm selection.

## Step 3: Single Button Operation (1-3 doors)



The display bar will illuminate as per the above image to show the current key settings. Using the arrow (Up & Down) buttons, select the desired button to operate your door. Press 'Enter' to confirm your selection. The unit will beep once to confirm your key settings have been saved and your setup was successful.

**Note:** Changing the key setting on your operator will update all programmed handsets.

## Glidermatic GTS+

### Handset Key Settings cont...

The following instructions demonstrate how to program or change the key settings on your Gliderol handset, allowing you to select the specific button that operates your door. This procedure will assist in reprogramming your handset from three-button Open/Stop/Close operation to single-button operation. It will also assist in reprogramming your handset to operate multiple doors.

#### Step 3: Three Button Operation (1 door only)



The display bar will illuminate to show the current key settings. Using the arrow (Up & Down) buttons navigate through the key options until all of the display bar is illuminated. Press 'Enter' to confirm your selection. The unit will beep once to confirm your key settings have been saved and your setup was successful.

**Note: Changing the key setting on your operator will update all programmed handsets.**

**Your handset key settings  
are now saved & ready to use!**



Please note, this procedure will simply program the key settings on your Gliderol handset, allowing you to select the specific button that operates your Gliderol Sectional door. To program a new or additional handset please refer to our 'Glidermatic GTS+ Programming Additional Handsets' factsheet.