

Glidermatic GTS+ Optima

Programming New or Additional Handsets

The following instructions demonstrate how to program a new or additional Gliderol handset to suit your existing Glidermatic GTS+ Optima garage door operator. Please note, if you are replacing a lost or stolen handset we recommend erasing all existing handset data from your operator prior to programming your new handset. To erase all handsets from the memory, hold down the 'Learn' button (shown in step 2) for 15 seconds. Any other handsets previously used will need to be reprogrammed.


Step 1:



Carefully remove the light cover by pulling down on the tab near the front of the unit.

Note: The light cover is connected to the units circuit board. Whilst the cover can be unplugged whilst programming your handsets, it must be reconnected to the same two-pin position when completed.

Step 2:

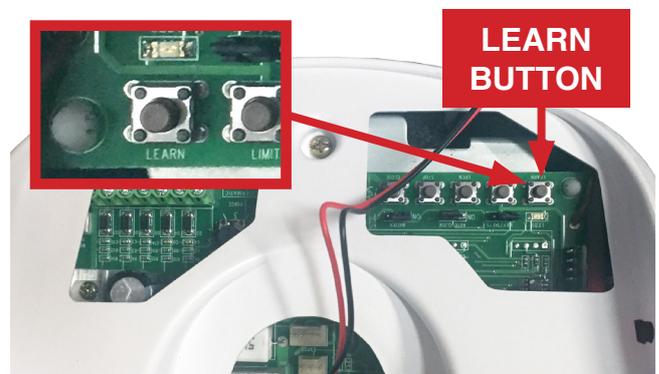

Press the 'Learn' button once. A red light will illuminate and the unit will beep three times to confirm the unit is in learn mode.

Step 3:



Press the button on the handset that you would like to operate the door. The unit will beep once to confirm successful coding (two beeps indicates the handset has already been programmed). Wait approx 3 seconds for the unit to exit setup mode.

**Your handset programming
is now complete!**



Should you require further assistance in programming your Glidermatic GTS+ Optima handset please contact your local Gliderol office on 1300 799 177.