

# Glidermatic GRD

## Handset Key Settings


The following instructions demonstrate how to program or change the key settings on your Gliderol handset, allowing you to select the specific button that operates your door. This procedure will assist in reprogramming your handset from three-button Open/Stop/Close operation to single-button operation. It will also assist in reprogramming your handset to operate multiple doors.

### Step 1:





Carefully remove the Control Box cover by lifting the tab on the bottom of the unit.

### Step 2:

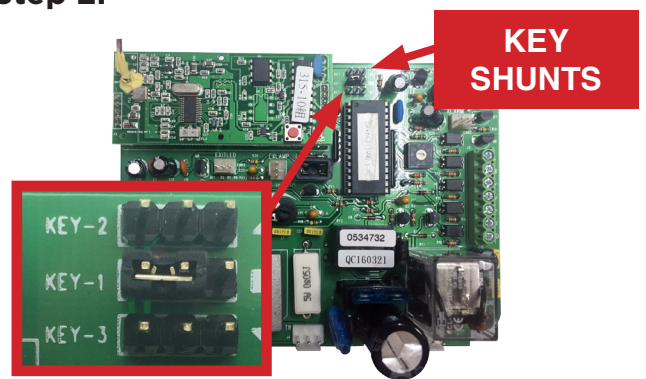

Locate the three key shunts on the main control board (adjacent to the receiver board). These are labelled KEY-2, KEY-1 & KEY-3 and correspond to the buttons on your remote.

### Step 3: Single Button Operation (1-3 doors)

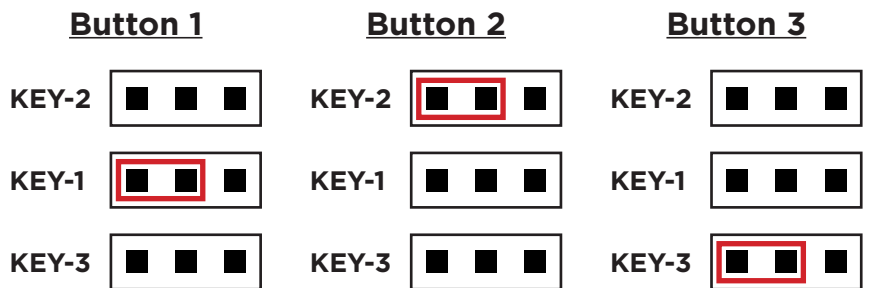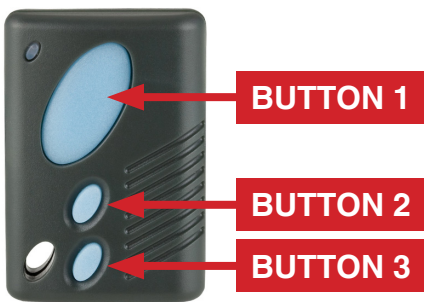

**Note:** To operate multiple doors (up to 3) from one remote, simply place a second jumper adjacent to the desired key label

Relocate the jumper to the first two pins (on the left hand side) adjacent to the desired key label as per the above diagrams. The jumper is the small, black sleeve that slides over the key shunts and is also shown in the KEY-1 position in Step 2.


**Note:** Changing the key setting on your operator will update all programmed handsets.

# Glidermatic GRD

## Handset Key Settings cont...

The following instructions demonstrate how to program or change the key settings on your Gliderol handset, allowing you to select the specific button that operates your door. This procedure will assist in reprogramming your handset from three-button Open/Stop/Close operation to single-button operation. It will also assist in reprogramming your handset to operate multiple doors.

### Step 3: Three Button Operation (1 door only)

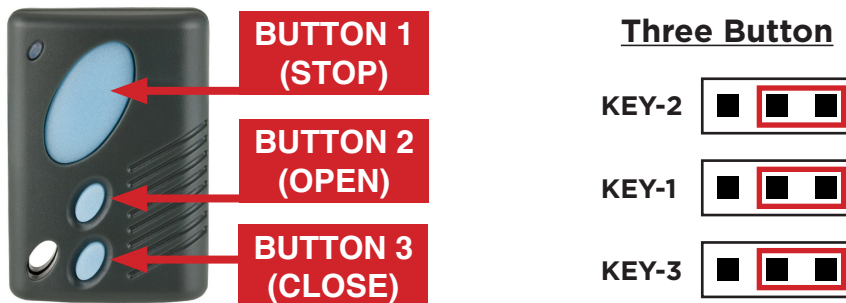

Relocate the jumpers to the last two pins (on the right hand side) adjacent to each key label as per the above diagram. Jumpers are the small, black sleeves that slide over the key shunts and one is shown in the KEY-1 position in Step 2.

**Note: Changing the key setting on your operator will update all programmed handsets.**

**Your handset key settings  
are now saved & ready to use!**



Please note, this procedure will simply program the key settings on your Gliderol handset, allowing you to select the specific button that operates your Gliderol Sectional door. To program a new or additional handset please refer to our 'Glidermatic GRD Programming Additional Handsets' factsheet.