


Rollamatic GEN II

Programming New or Additional Remotes

The following instructions demonstrate how to program a new or additional Gliderol TM390+ GEN II remote to suit your existing Rollamatic GEN II roller door operator. Please note, if you are replacing a lost or stolen handset we recommend erasing all existing handset data from your operator prior to programming your new handset. Please refer to your Rollamatic GEN II Owners Manual for further information on this process.


Step 1:

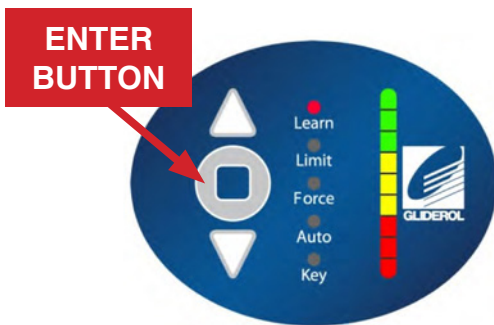

Press and hold the 'Enter' button (shown above) for 2 seconds to access the operator menu. The unit will beep twice to confirm this has been selected.


Note: Pressing the enter button for 5 seconds or more will erase all handset data from your operator - be careful not to press the enter key for longer than necessary.

Step 2:

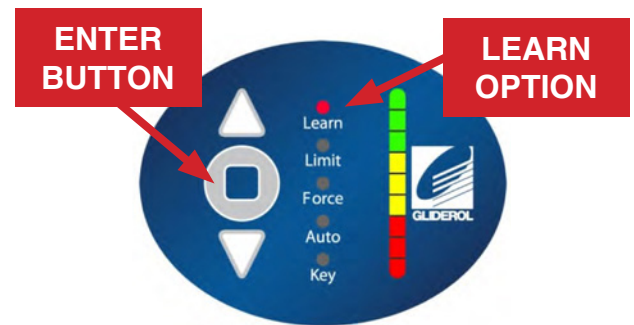

Use the arrow (Up & Down) buttons to select the 'Learn' option and press 'Enter' to confirm selection. The unit will beep three times to confirm the unit is in Learn mode.

Step 3:

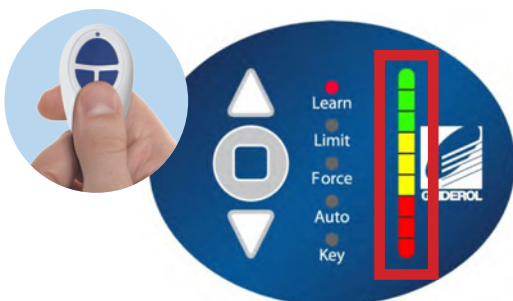

Press and hold the desired button for operation on the handset. Hold down until every light in the status bar on the powerhead (as shown above) is lit up.

To program a single remote to operate multiple doors (up to 3), simply repeat these steps and select a different button for operation.

Your handset programming is now complete!



Should you require further assistance in programming your G+ remote, please contact your local Gliderol office on 1300 799 177.