

Glidermatic GRD

Manual Operation Guide

The following instructions demonstrate how to switch your Glidermatic GRD operator into manual operation mode and then back into automatic operation. This can be particularly useful in the event of a power outage or a problem arising with your operator, allowing you to remove a trapped vehicle from your garage.

How to put in Manual Operation Mode:



To put the door into manual operation mode, flip the red manual release lever (located at the end of your roller door curtain) 90 degrees so that it is pointing toward you. Your door can now be manually operated.

Note: Your door will need to be locked with your Gliderol key to be secure whilst in manual position.

How to put in Auto Operation Mode:

To put the door back into auto operation, start with the door in the halfway position (partially open). Return the red manual release lever to its original position. Please note, the lever will be loose at this stage.

Slowly raise/lower your door manually until you hear the release lever click into position. Your curtain should now be locked into automatic mode and you should be unable to move the door manually. Your door can now be automatically operated.

Should you require further assistance in operating your door, please contact your local Gliderol office on 1300 799 177.