


Glidermatic GRD+

Setting Door Travel Limits

The following instructions demonstrate how to set the travel limits of your Gliderol Roller door. Setting your door travel limits is a vital part of the initial setup of your Glidermatic GRD+ operator. Essentially, this communicates to the operator the specific distance it must travel to complete an open/close cycle. All steps must be completed in quick succession to prevent the unit from exiting Limit setup mode.


Step 1:

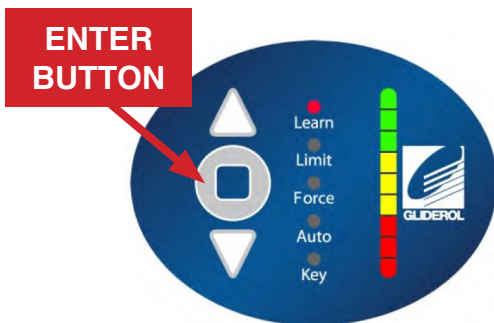

Press and hold the 'Enter' button (shown above) for 2 seconds to access the operator menu. The unit will beep twice to confirm this has been selected.

Note: Pressing the enter button for 5 seconds or more will erase all handset data from your operator - be careful not to press the enter key for longer than necessary.

Step 2:

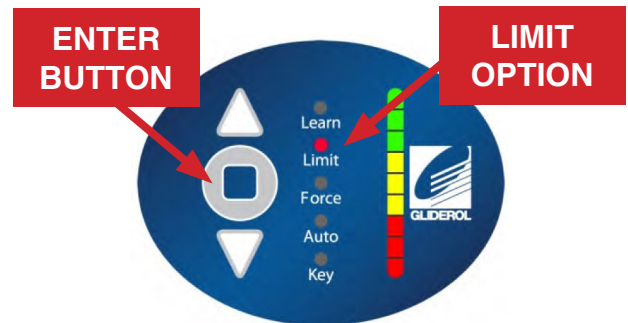

Use the arrow (Up & Down) buttons to select the 'Limit' option and press 'Enter' to confirm selection.

Step 3:




Left Hand Drive

Right Hand Drive

Standing inside your garage opening and facing out toward the street, determine if your operator is mounted on the left or right side of the door. Use the arrow (Up & Down) buttons to select your doors correct drive handling configuration. Press 'Enter' to confirm your selection. The door will automatically close to find the floor position.

Step 4:

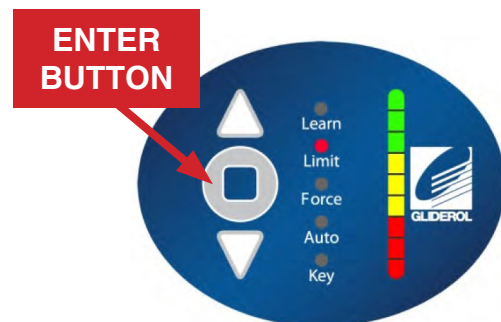


Upon reaching the floor, the unit will beep 3 times to confirm floor level has been reached. You can then set the top/open door limit by using the arrow (Up & Down) buttons on the operator (or the buttons on your Gliderol Handset) to raise the door curtain to it's open position. Press 'Enter' to confirm limit.

Glidermatic GRD+

Setting Door Travel Limits cont...

The following instructions demonstrate how to set the travel limits of your Gliderol Roller door. Setting your door travel limits is a vital part of the initial setup of your Glidermatic GRD+ operator. Essentially, this communicates to the operator the specific distance it must travel to complete an open/close cycle. All steps must be completed in quick succession to prevent the unit from exiting Limit setup mode.

Step 5:

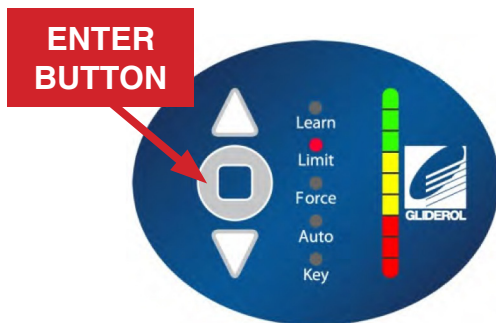

Set the bottom/close door limit by using the arrow (Up & Down) buttons on the operator (or the buttons on your Gliderol Handset) to lower the door curtain to it's closed position. Press 'Enter' to confirm limit.

Your travel limit setup is now complete!



Once limits are set the unit will automatically perform a full calibration cycle. When the door is closed after calibration, the limits are successfully setup and your door ready to use.